REALTRUCK RESERRCH. Power Step

APPLICATION

LENGTH

MODEL YR

PART

Ford Super Duty F-250 / F-350 Regular Cab* (48") Ford Super Duty F-250 / F-350 Super Cab* (60") Ford Super Duty F-250 / F-350 Crew Cab (79")


Ford Excursion* (79")

*Modification required to running board assembly. See Item 1 on page 3.

1999-2001 / 2004-2007	7
1999-2001 / 2004-2007	7
1999-2001 / 2004-2007	7
2000-2001 / 2004–2005	7

75104-01A 75104-01A 75104-01A 75104-01A

INSTALLATION GUIDE

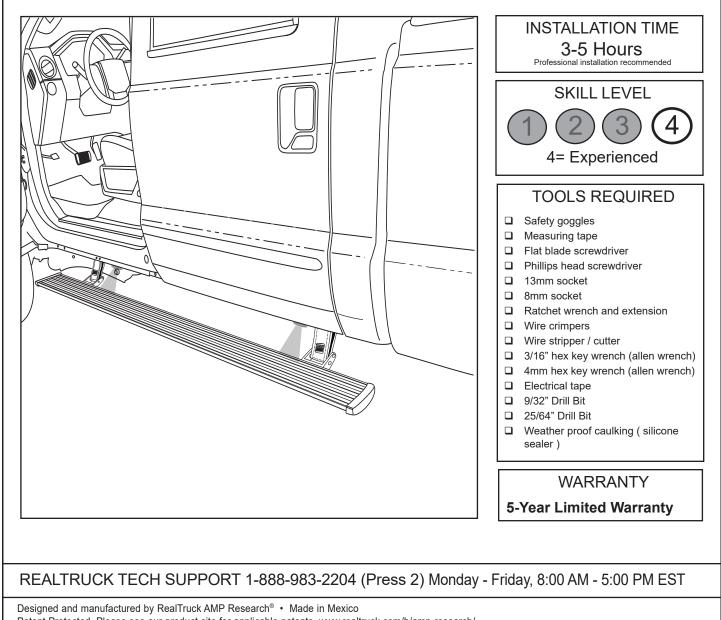


Patent Protected. Please see our product site for applicable patents. www.realtruck.com/b/amp-research/ © RealTruck Group, Inc., 2024 • Three-year limited warranty. • Professional installation is recommended.

www.realtruck.com


IM75104 rev 06.10.24


INSTALLATION GUIDE Attaching motor to linkage assembly


The motors must be attached to the linkage assemblies before continuing the installation process.

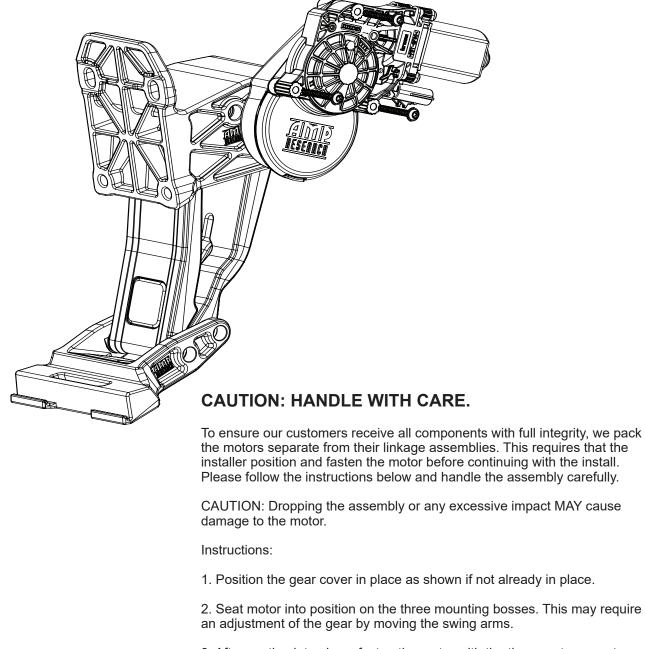



3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

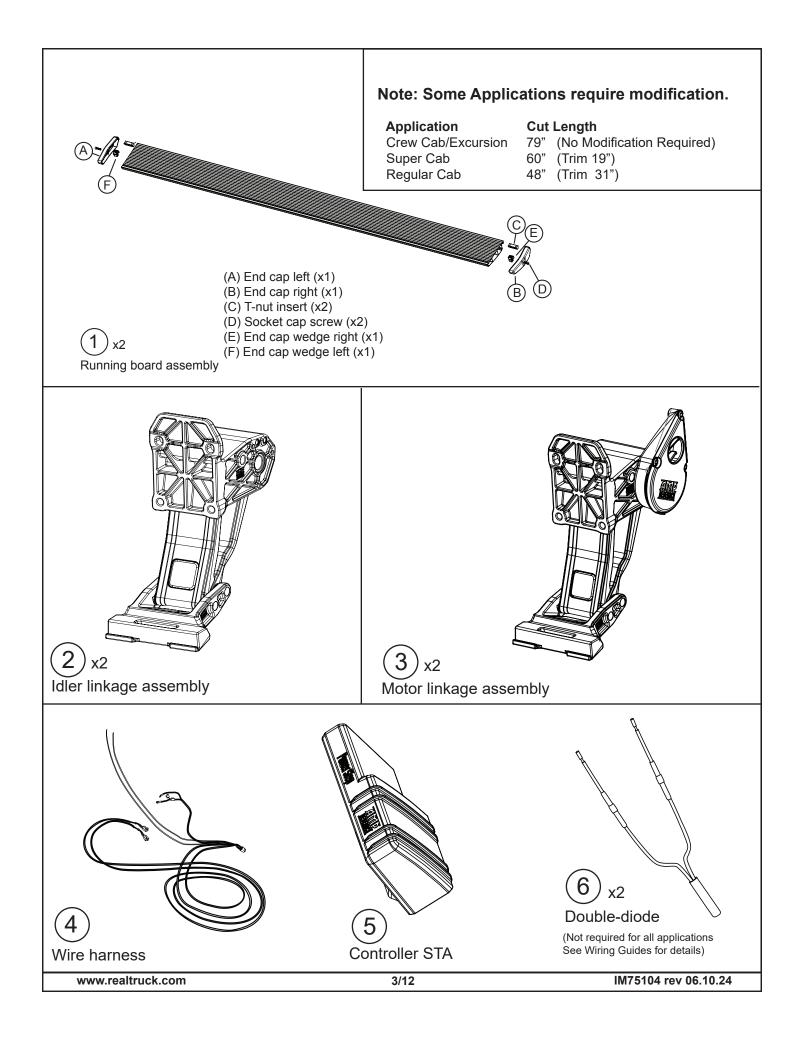


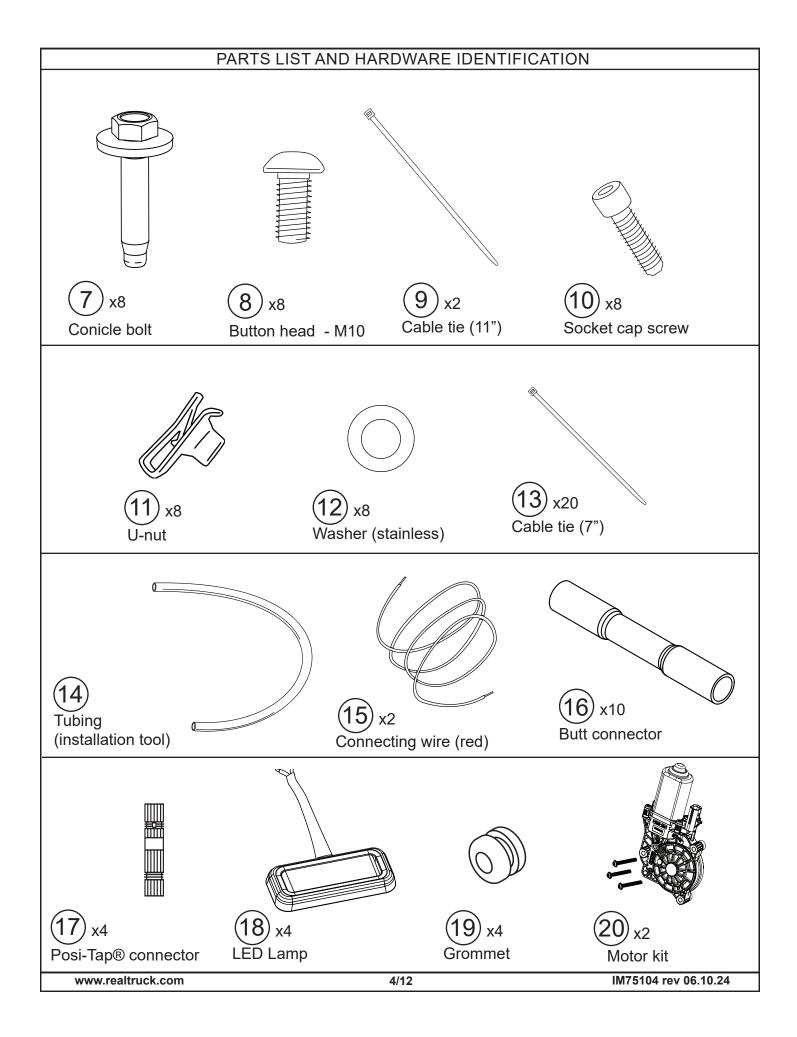


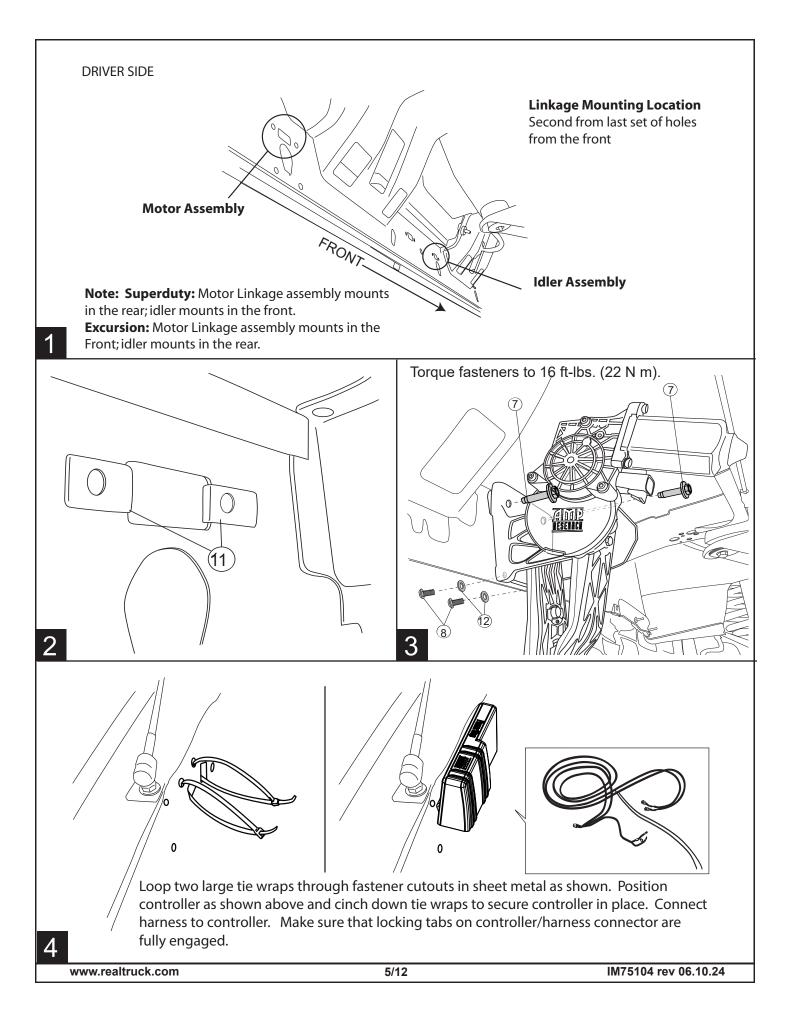


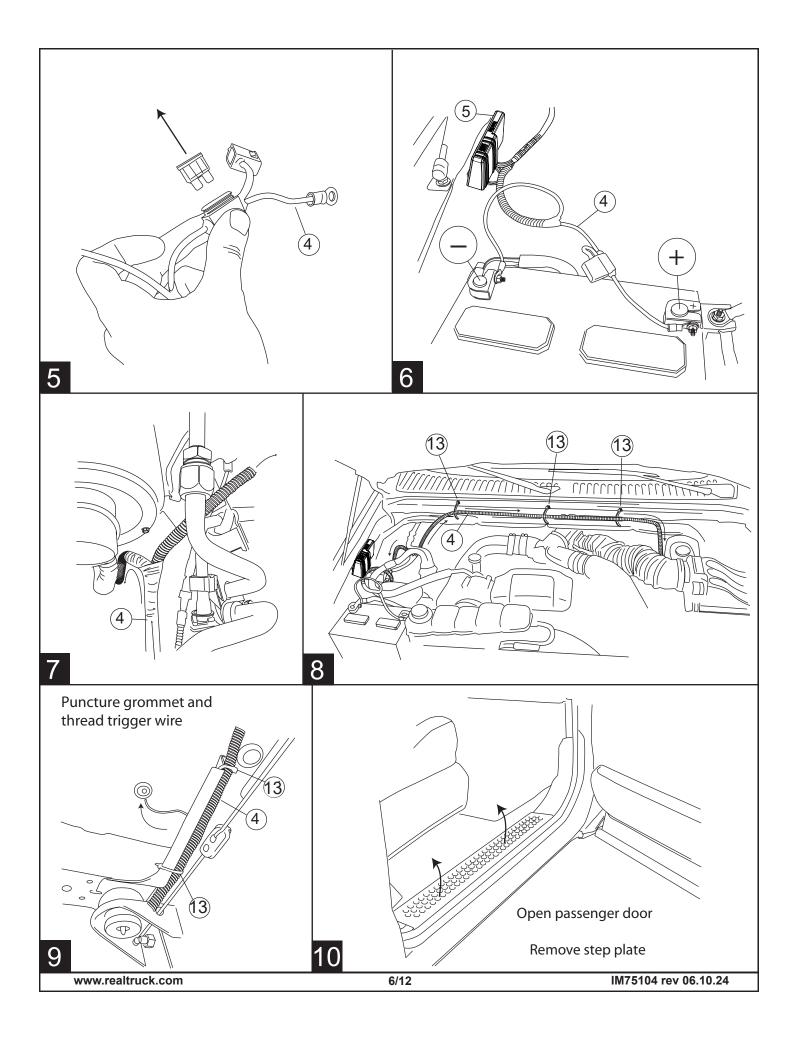


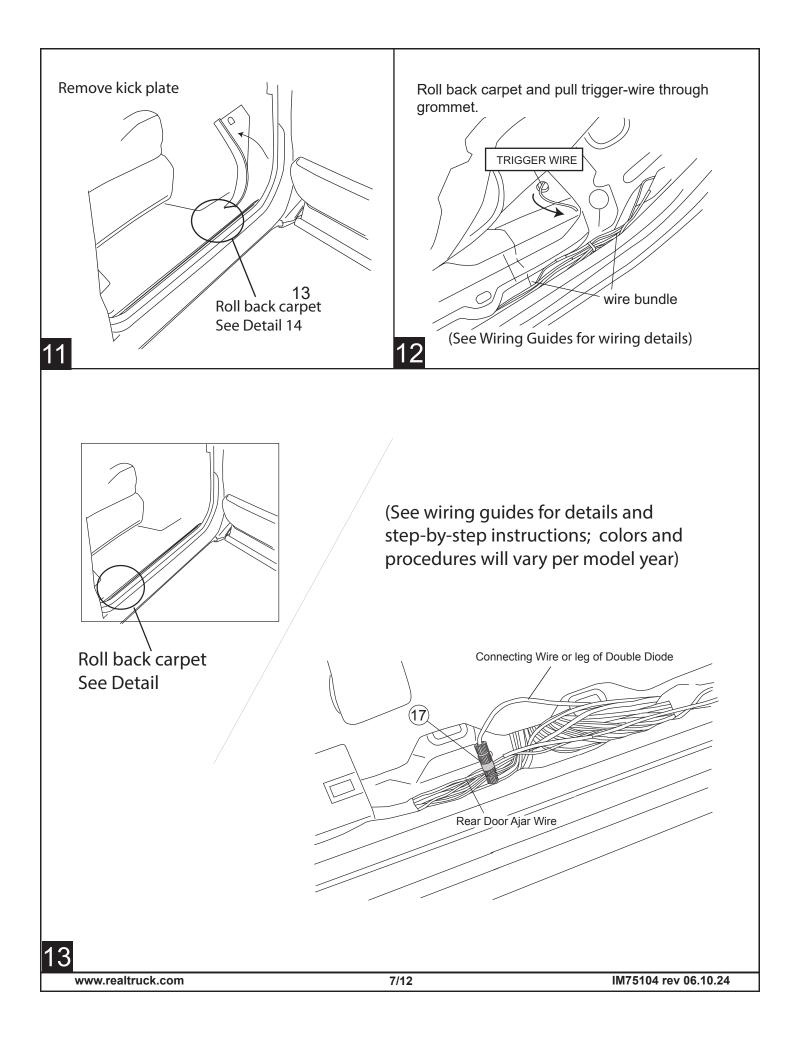

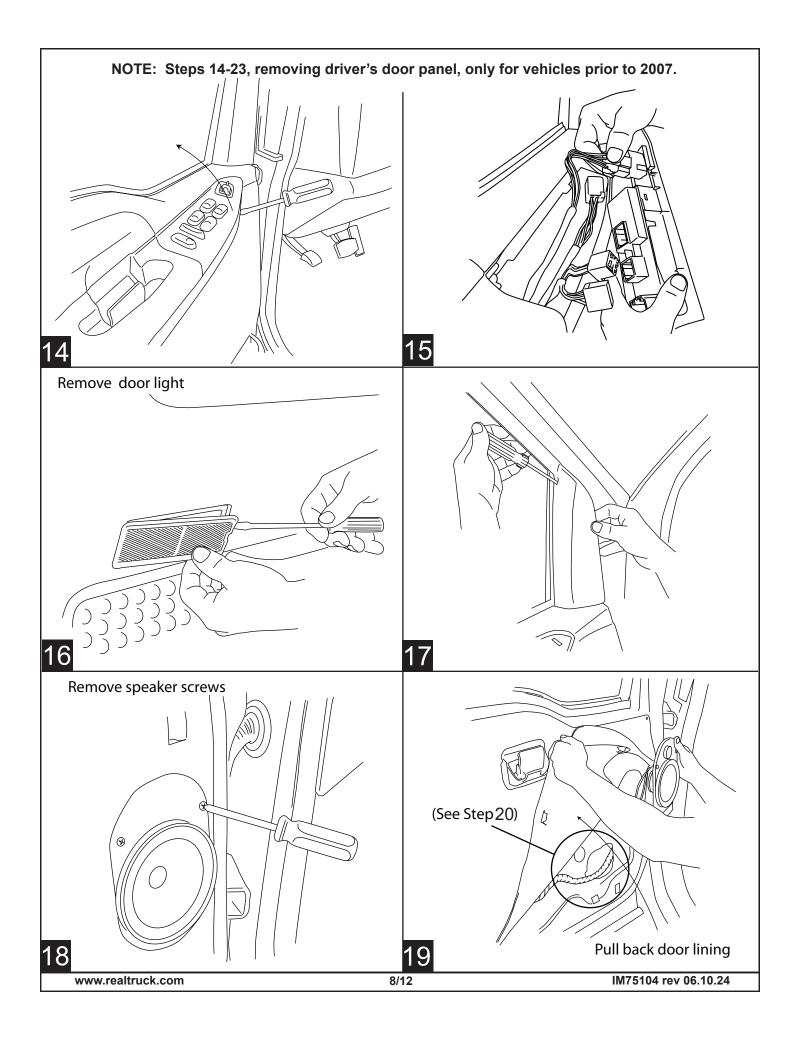


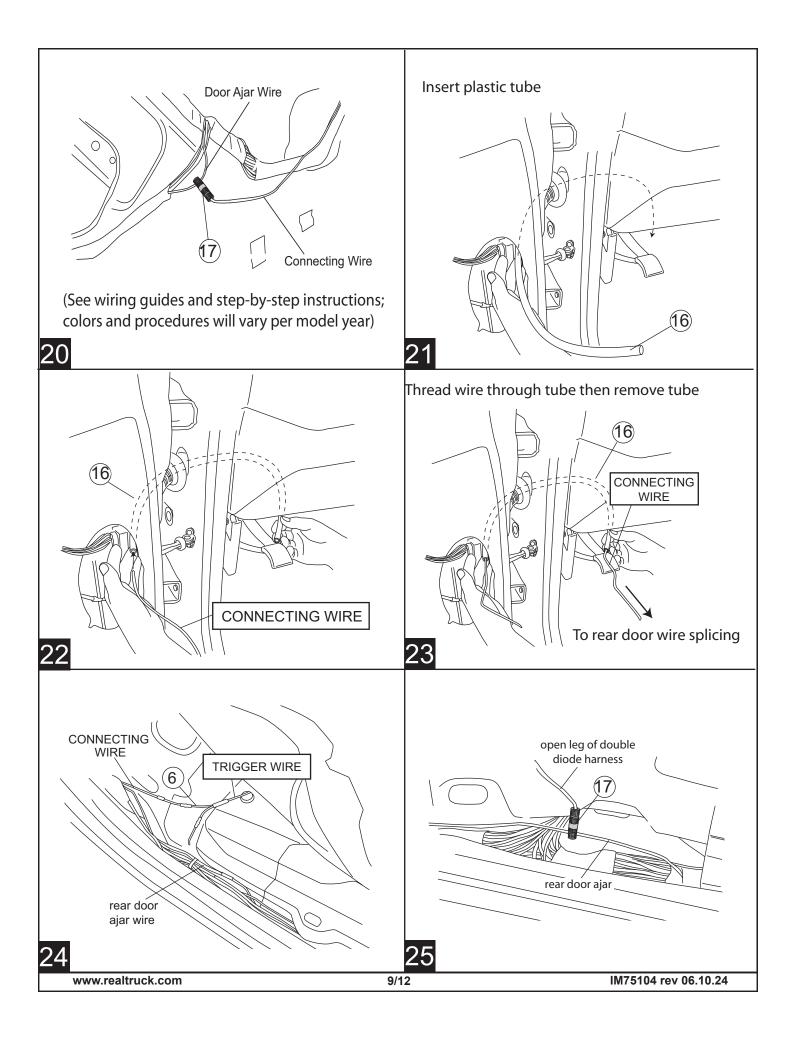

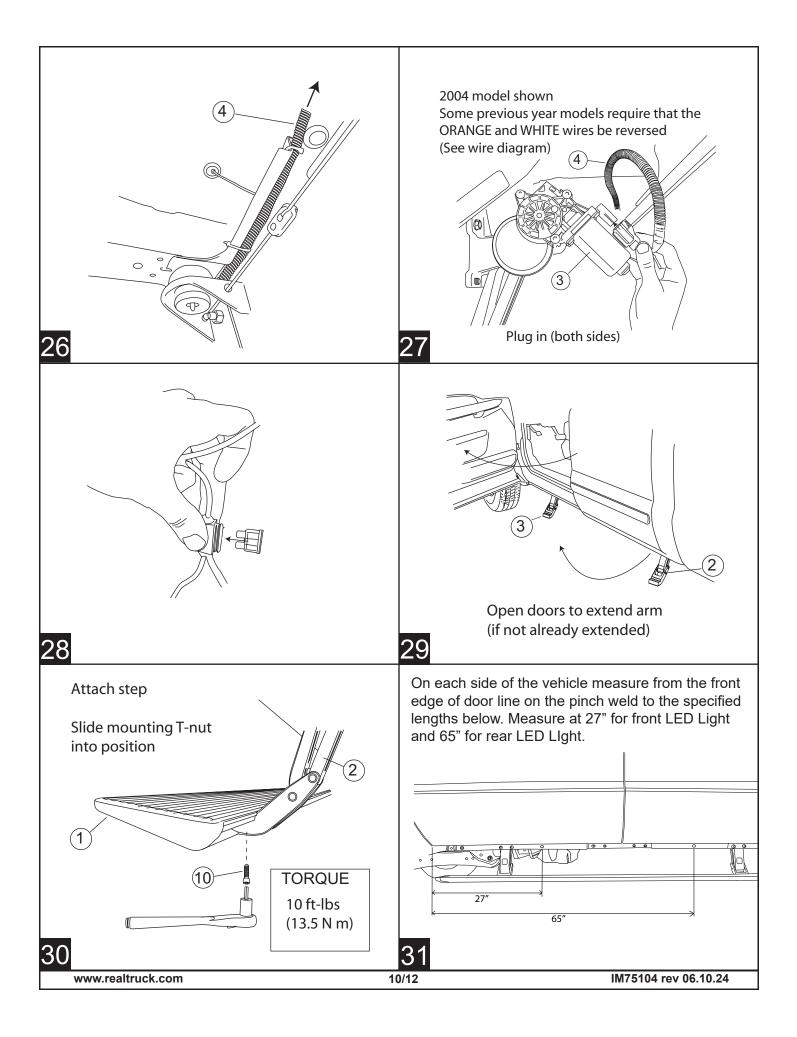

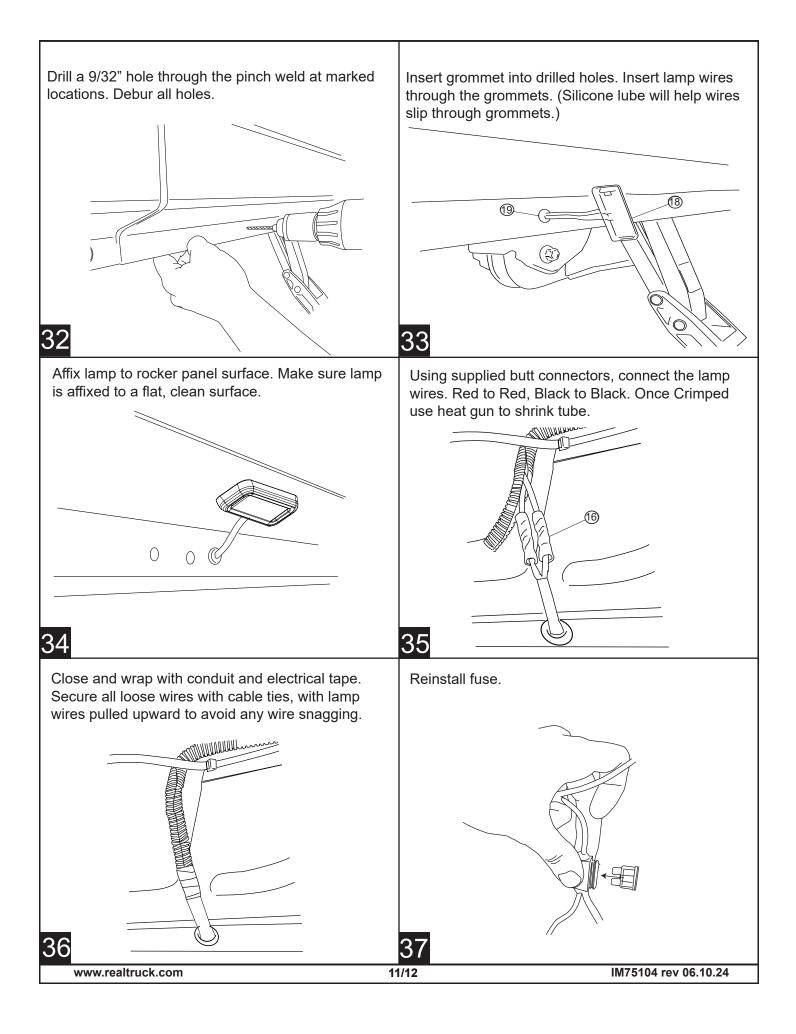

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

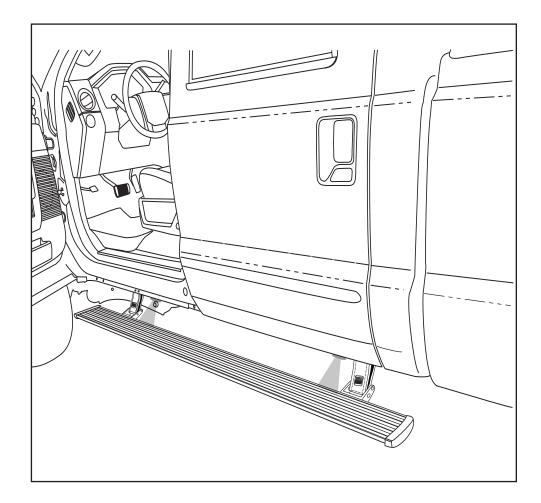

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. *Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.* **CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.

REALTRUCK(Image: Description of the section of t

Diodes

4. Insert & Tighten

NOTE: 2004-2006 Ford Super Duty trucks **<u>without</u>** remote keyless plus 2001 and older Super Duty trucks **<u>with</u>** remote keyless entry require additional diodes that are not included in the standard parts kit.

For two or more wires


twist.

CAUTION

□ Handle the motor and linkage assemblies with care when installing. Dropping can damage motor.

□ Remove fuse from wiring harness during installation. Failure to do so could result in severe electrical shock.


WIRING GUIDE Ford Super Duty (2007) With remote keyless entry

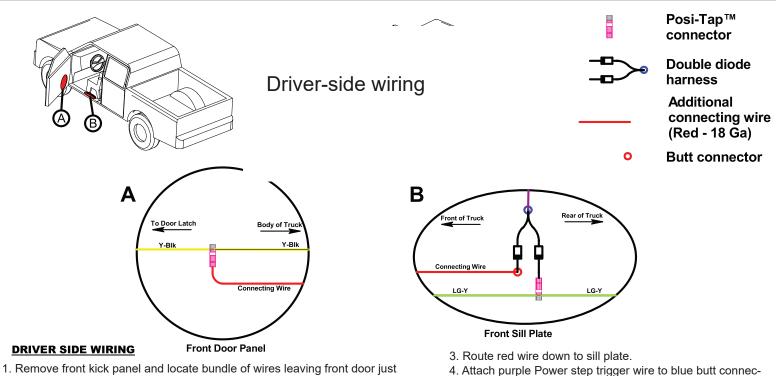

1. Remove front kick panel and locate bundle of wires leaving front door just above e-brake assembly (Area-A). Open bundle and locate 18Ga door-ajar wire (yellow with black stripe).

Caution: You may find two wires with these colors; the correct wire will ground when the door is open (ohm meter will read low resistance with door open and OL (open line) with the door closed.

2. Using supplied Posi-Tap connectors, splice supplied red connecting wire into yellow with black stripe wire.

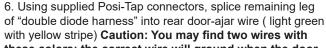


tor of "double diode harness".

red connecting wire.

these colors; the correct wire will ground when the door is open (ohm meter will read low resistance with door open and OL (open line) with the door closed.

5. Attach one leg of "double diode harness" to open end of

07

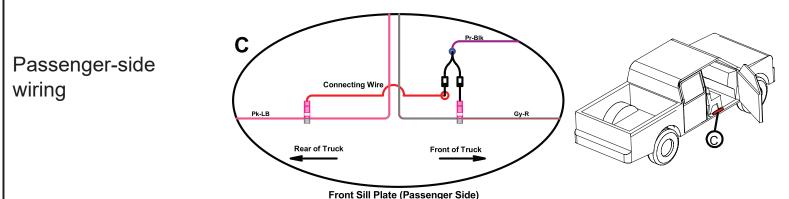

PASSENGER SIDE WIRING

1. Remove sill plate and attach purple Power Step trigger wire to blue butt connector of "double diode harness".

2. Open wire bundle and locate door-ajar wires (rear: pink with light blue stripe; front: grey with red stripe. Both wires pass under front seat as shown in figure-C

3. Using supplied Posi-Tap connectors, splice the open legs of the "double diode harness" into the door-ajar wires.


4. If necessary, attach red connecting wire to "double diode harness" to extend length as needed.

Notes:

1. All of the signal wires we tap into will be 18Ga. Do not tap into anything with a thicker gage than this.

Occassionally the wire colors do not match the wire schematics. Under these circumstances you will need to locate the door-ajar signal wires. Each door will have one wire leading out to its latch and one ground wire coming away. The ground wire will usually be solid black. The signal wire we need is the other wire.
Make sure you secure all wires after install. Loose wires can be damaged and may cause a failure in the Powerstep's function.

WIRING GUIDE Ford Super Duty (2004 - 2006) With remote keyless entry

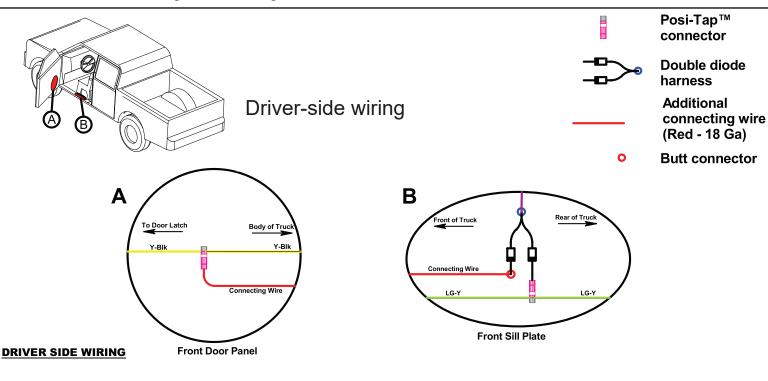

1. Remove front door panel and locate bundle of wires below and to the left of speaker (Area-A). Open bundle and locate 18Ga door-ajar wire (yellow with black stripe). Caution: You may find two wires with these colors; use wire that leads out to door latch.


2. Using supplied Posi-Tap[™] connectors, splice supplied red connecting wire into yellow with black stripe wire.

- 3. Route red wire back into cab of vehicle.
- **4.** Attach purple Power Step trigger wire to blue butt connector of "double diode harness".

5. Attach one leg of "double diode harness" to open end of red connecting wire.

6. Using supplied Posi-Tap™ connectors, splice remaining leg of "double diode harness" into rear door-ajar wire (light green with yellow stripe).

CAUTION: You will find two wires with these colors; the correct wire will ground when the door is open (ohm meter will read low resistance with door open and OL with door closed).

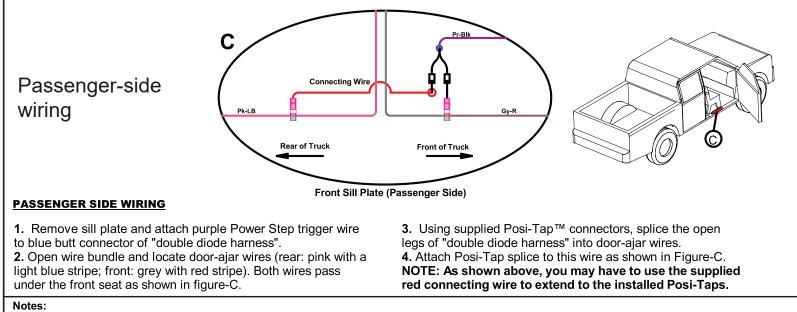



1. All of the signal wires we tap into will be 18Ga. Do not tap into anything with a thicker gage than this.

Occasionally the wire colors do not match the wire schematics. Under these circumstances you will need to locate the door-ajar signal wires. Each door will have one wire leading out to its latch and one ground wire coming away. The ground wire will usually be solid black. The signal wire we need is the other wire.
Make sure you secure all wires after install. Loose wires can be damaged and may cause a failure in the Powerstep's function.

04 - 06

WIRING GUIDE Ford Super Duty (2004 - 2006) Without remote keyless entry

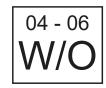

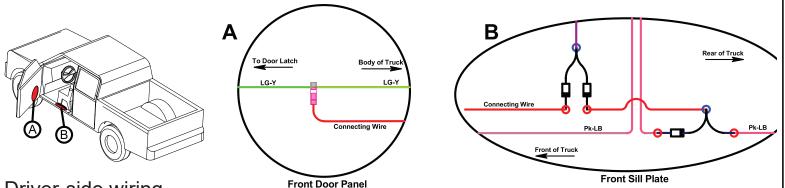

Driver-side wiring

5. Cut wire and install "single diode harness" as oriented in Figure-B.


below and to the left of speaker (Area-A). Open bundle and locate 18Ga door-ajar wire (light green with yellow stripe). Caution: You may find two wires with these colors; use wire that leads out to door latch.

6. Attach red connecting wire routed from area-A to the open blue butt connector of "single diode harness" installed in step 5.


7. Attach blue connector of "double diode harness" to the purple signal wire of

2. Using supplied Posi-Tap[™] connectors, splice supplied red connecting wire into light green with yellow stripe wire. 3. Route red wire into cab of vehicle and back toward sill plate area.

1. Remove front door panel and locate bundle of wires

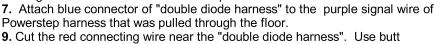

connectors to connect each cut end of the connecting wire to the open legs of the "double diode harness".

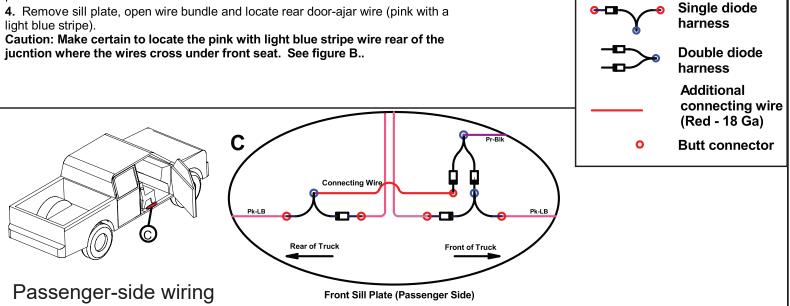

1. Remove front sill plate, open wire bundle and locate rear door-ajar wire (pink with a light blue stripe). This wire will be located rear of the junction where the wires route under the front passenger seat.

2. Cut wire and install "single diode harness" as oriented in Figure-C.

3. Locate front door-ajar wire (also pink with a light blue stripe). This wire will be located in front of the junction where the wires route under the front passenger seat.


4. Cut wire and install "single diode harness" as oriented in the figure above. 5. After both "single diode harnesses" have been installed, attach the supplied connecting wire to the blue connector of the rear "single diode harness".

6. After trimming to length, attach the opposite end of the connecting wire and the purple signal wire of the Powerstep harness to the blue connector on the front "single diode harness".

Notes:

1. All of the signal wires we tap into will be 18Ga. Do not tap into anything with a thicker gage than this.

2. Occassionally the wire colors do not match the wire schematics. Under these circumstances you will need to locate the door-ajar signal wires. Each door will have one wire leading out to its latch and one ground wire coming away. The ground wire will usually be solid black. The signal wire we need is the other wire. 3. Make sure you secure all wires after install. Loose wires can be damaged and may cause a failure in the Powerstep's function.

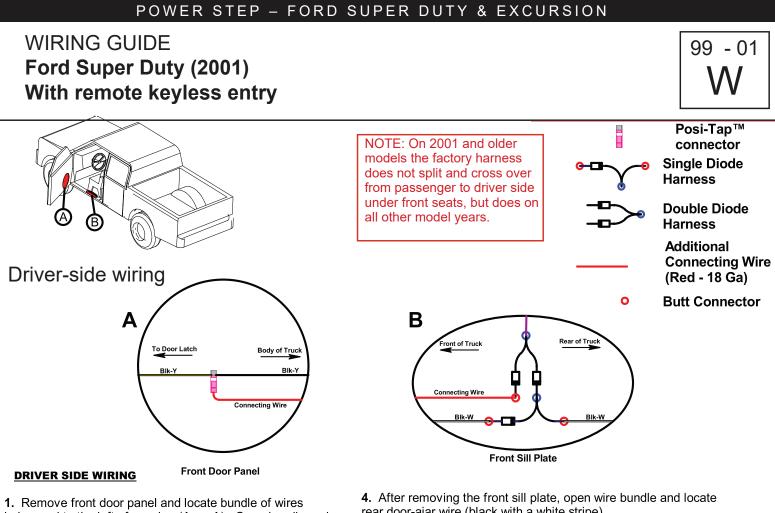

below and to the left of speaker (Area-A). Open bundle and locate 18Ga door-ajar wire (black with yellow stripe). Caution: You may find two wires with these colors; use wire that leads out to door latch.

2. Using supplied Posi-Tap[™] connectors, splice supplied red connecting wire into black with yellow stripe wire. 3. Route red wire back into cab of vehicle.

4. Attach purple Power Step trigger wire to blue butt connector of "double diode harness".


rear door-ajar wire (black with a white stripe).

5. Cut wire and install "single diode harness" as oriented in the Figure-B.

6. Connect blue connector of "double diode harness" to purple Power Step trigger wire that was pulled through the floor.

7. Attach connecting wire that comes from Area-A as shown in the figure using supplied red butt connector.

8. Attach the open blue connector of "single diode harness" to the remaining open leg of "double diode harness".

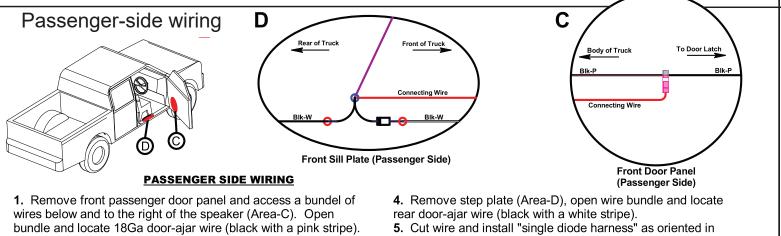

2. Using supplied Posi-Tap[™] connectors, splice supplied red connecting wire into black with pink stripe wire.

3. Route red wire back into cab of vehicle and down to sill plate.

Figure-D.

6. Attach connecting wire from step-3 and purple signal wire from Powerstep harness to "single diode harness" as shown in Figure-D.


Notes:

1. All of the signal wires we tap into will be 18Ga. Do not tap into anything with a thicker gage than this.

2. Occassionally the wire colors do not match the wire schematics. Under these circumstances you will need to locate the door-ajar signal wires. Each door will have one wire leading out to its latch and one ground wire coming away. The ground wire will usually be solid black. The signal wire we need is the other wire. 3. Make sure you secure all wires after install. Loose wires can be damaged and may cause a failure in the Powerstep's function.

WIRING GUIDE

Ford Super Duty (2004 - 2006) Regular Cab & Extended Cab With remote keyless entry

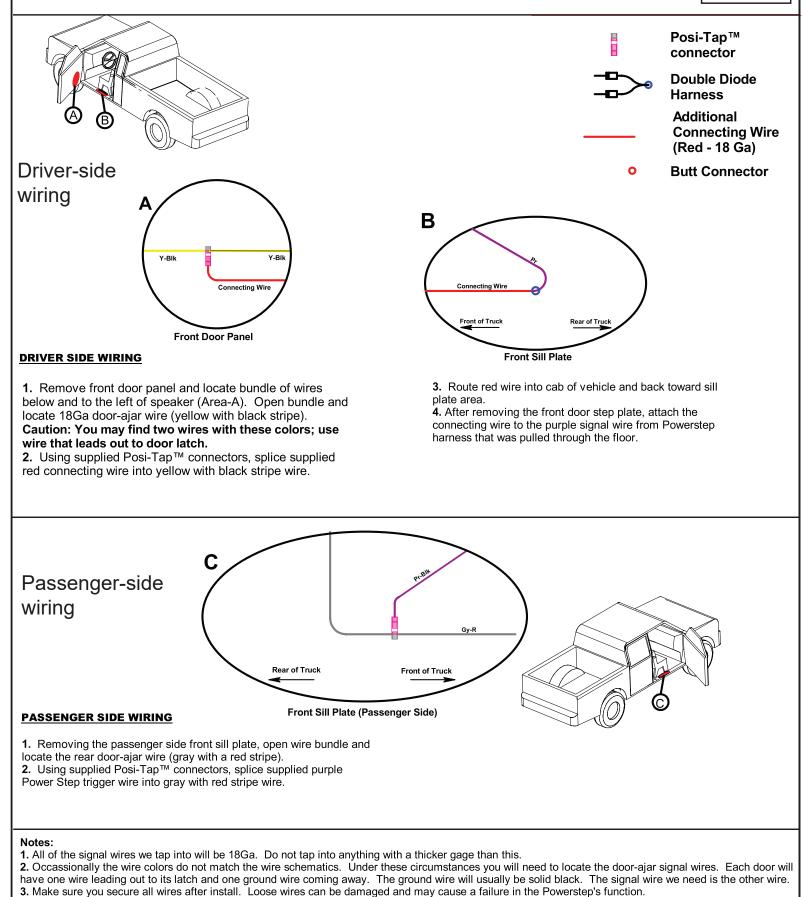



AMERICAN DESIGNED & ENGINEERED

Thank you for your recent RealTruck purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit: https://realtruck.com/warranty-registration/ or scan the QR Code



Product Registration Benefits:

• Ensure we have your purchase receipt and product info in our system which is required for warranty.

• Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support.

• Registration helps us keep you up to date on product information and offers.

To view other RealTruck products that may be offered for your vehicle.

Please visit: www.realtruck.com

REALTRUCK RESERRER Power Step

Congratulations on your purchase of the genuine RealTruck / AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: RealTruck / AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly</u>. After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All[®] to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

RealTruck / AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, acts by nature or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL REALTRUCK TECH SUPPORT 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.