


INSTALLATION GUIDE Attaching motor to linkage assembly

The motors must be attached to the linkage assemblies before continuing the installation process.

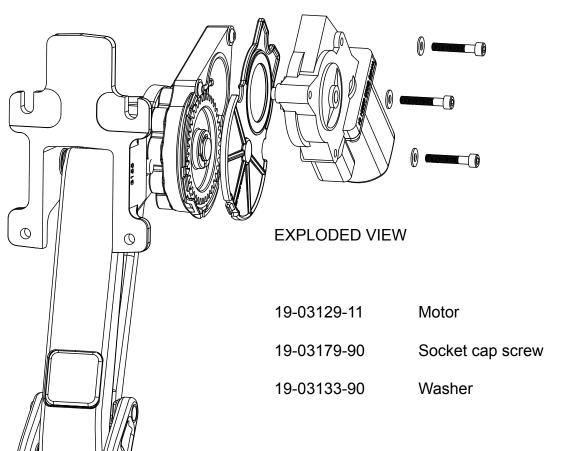

### CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.

Instructions:

1. Position the gear cover in place as shown if not already in place.


2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.


3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.** 


Purpose: Due to vehicle-build variations the Power Step may not correctly align with vehicle cladding. Using supplied shims, please follow the instructions below to correct the alignment.


Misalignment:	Shim Correction:
The gap between board and vehicle cladding is too large toward rear of running board.	Shim rear mount at lower bolt. (diagram below)
The gap between board and vehicle cladding is too small toward rear of running board.	Shim rear mount at upper bolt. (diagram below)
The gap between board and vehicle cladding is too large toward front end of running board.	Shim front mount at lower bolt. (diagram below)
The gap between board and vehicle cladding is too small toward front end of running board.	Shim front mount at upper bolt. (diagram below)

**Shim Placement:** Place shim(s) *only where needed* as indicated above in "Misalignment/ Shim Correction" chart.

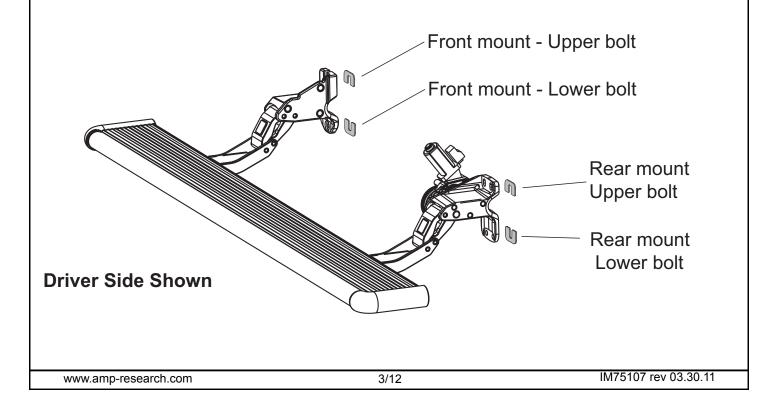


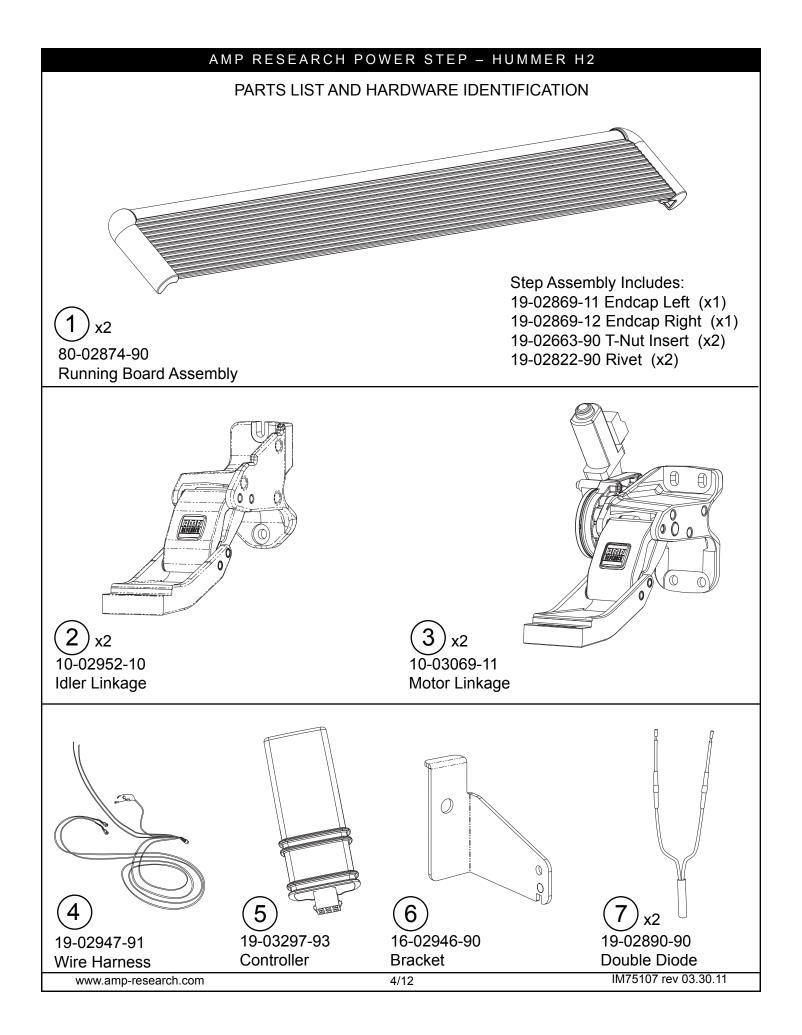


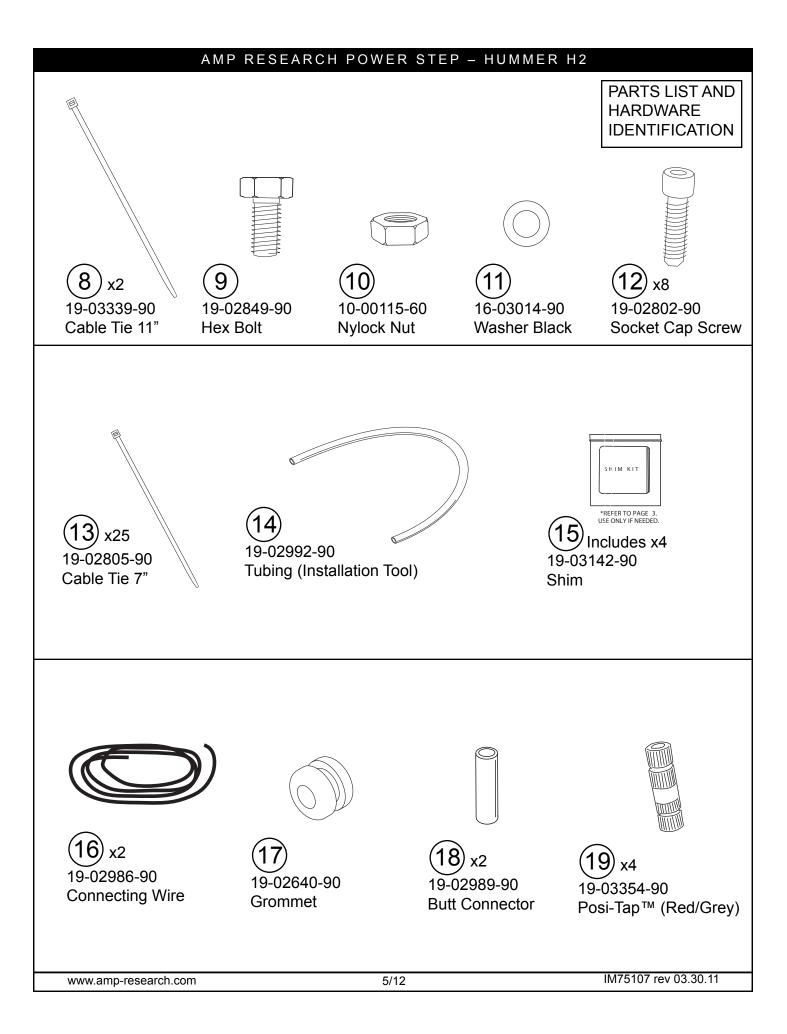


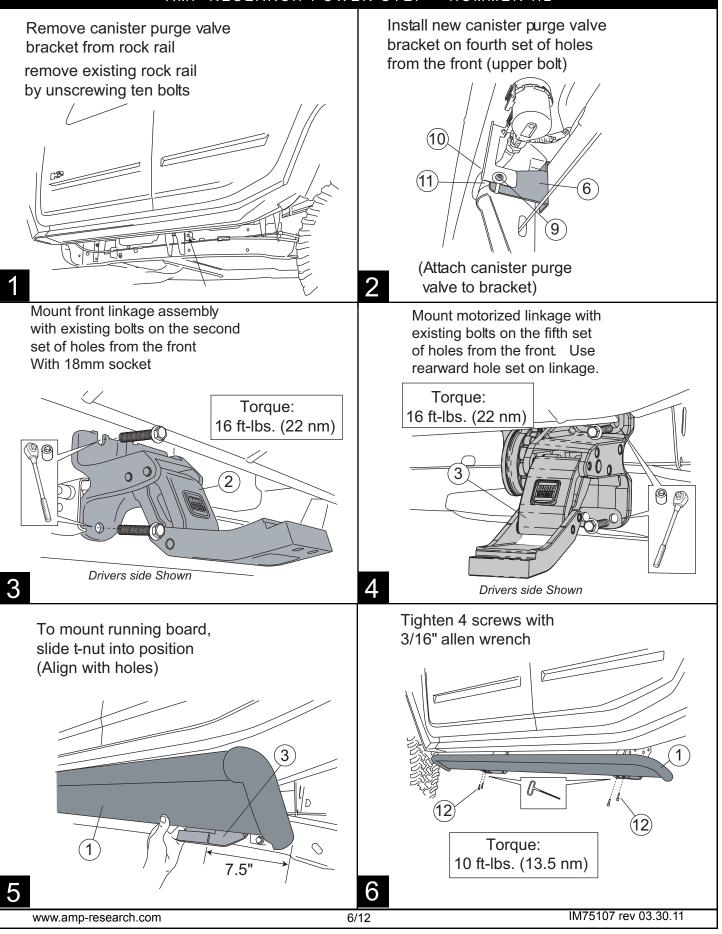


## AMP RESEARCH POWER STEP - HUMMER H2 Using the two 11" cable ties, mount controller Connector to factory wire conduit above brake booster on drivers side of truck. Note: Check to make sure all metal terminals are (5) fully seated in connector (locked into place) before connecting. Ensure also that locking tabs on connector engage after mating the two Plug in wire harness. connectors. (Ensure that locking 8 tabs engage.) Route long end of wire harness across Remove power fuse. Attach power lead engine and down through passenger (RED) wire to positive lead in the junction side wheel well. Route short end down Box. Attach ground lead (BLACK) to driver side wheel well. junction box mounting bracket bolt. 16 (16) 4 9 10 Route the wire harness along the frame Poke hole through rubber grommet using nylon zip ties. near front door on underside of floor panel with phillips screwdriver. Push wire through hole. Δ (16) IM75107 rev 03.30.11 www.amp-research.com 7/12

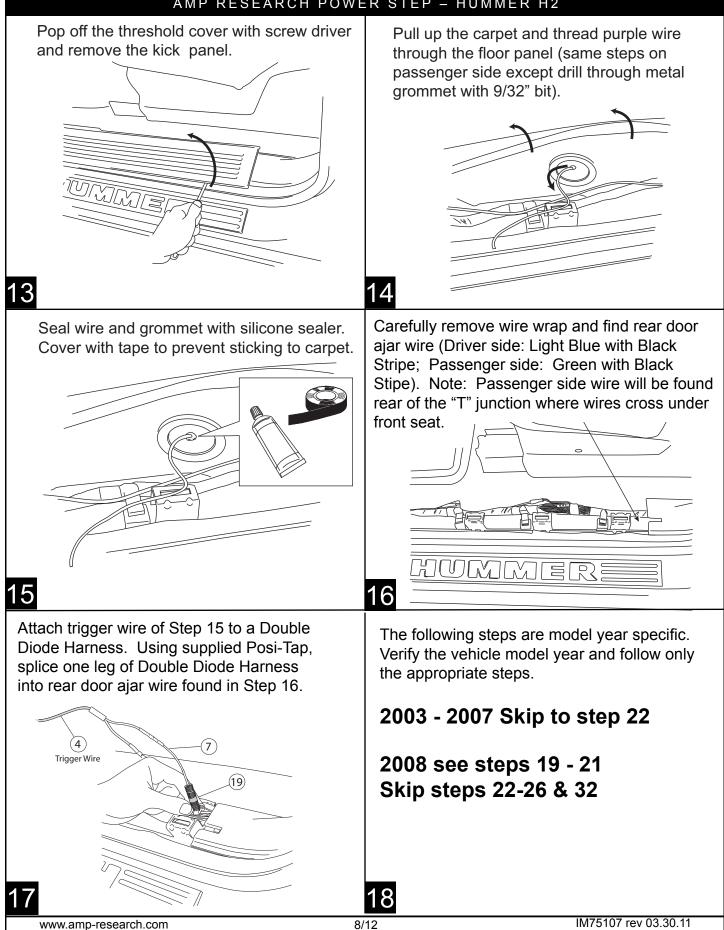

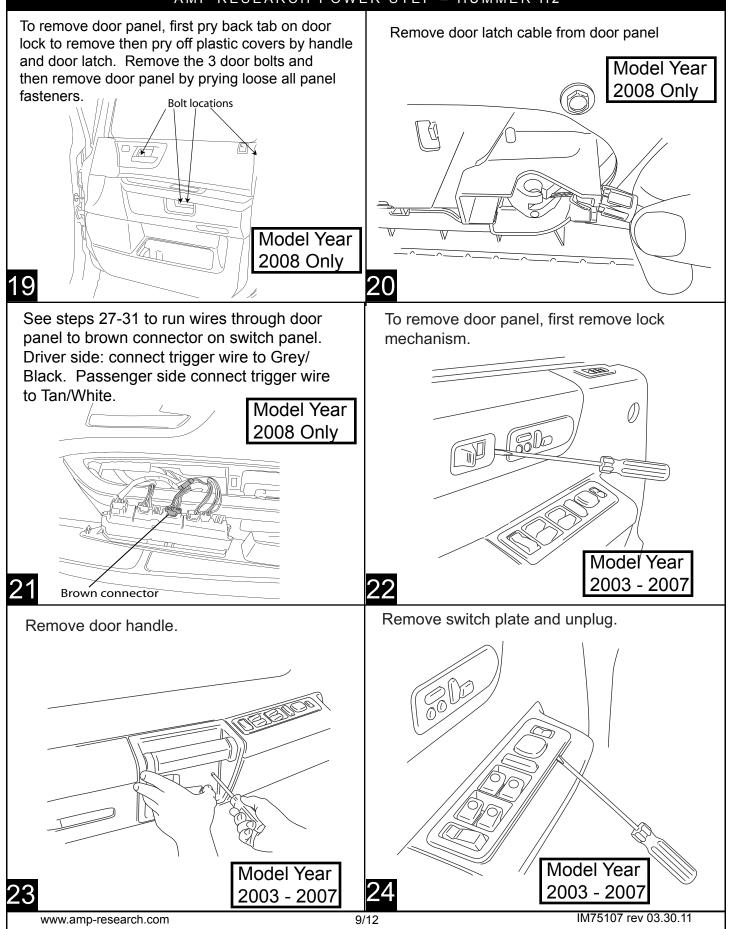


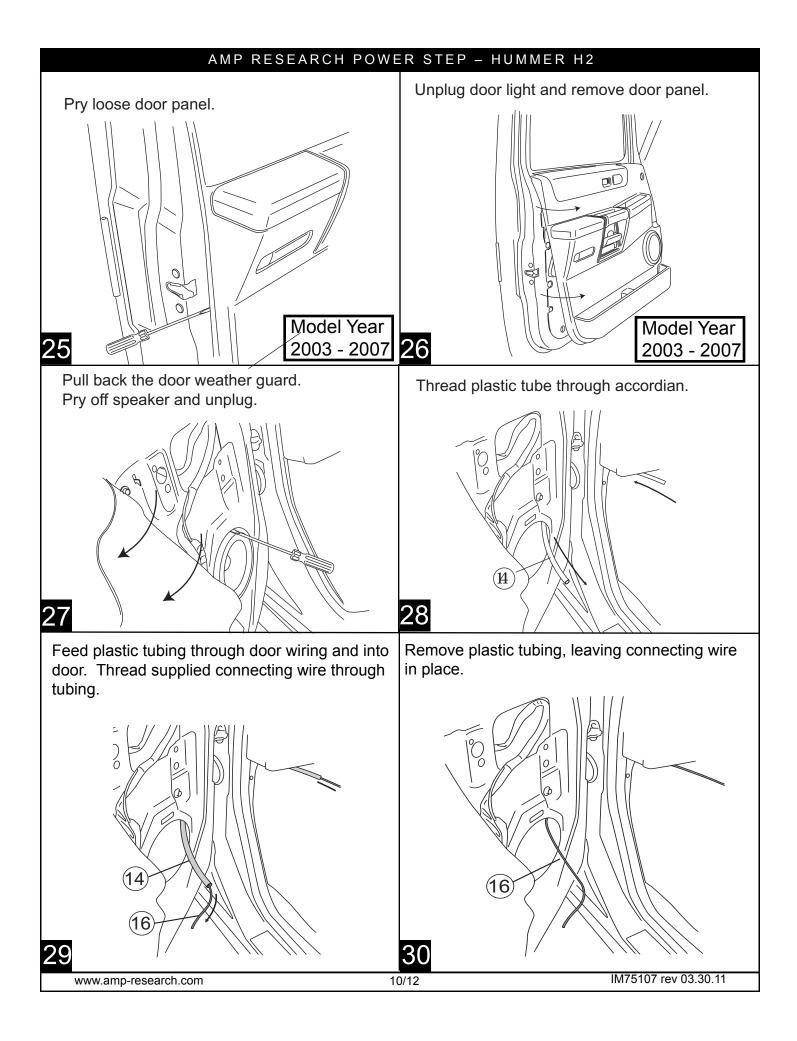

Route wire along harness going to switch plate.

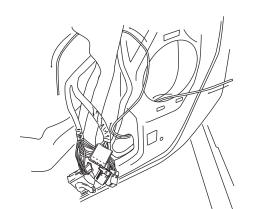

Using supplied Posi-Taps<sup>™</sup>, splice into front door ajar wire (Driver side: Grey with black stripe; Passenger side: Black with white stripe).

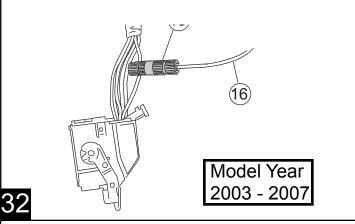

Route connecting wire back along factory wire

bundle under sill plate toward the double diode

harness that was installed in Step 17.

Secure wire harness with black tape.

Caution: Unsecure wire may interfere with window operation.

Push weather guard back into place.

Reconnect speaker wire and replace speaker.

Reinstall door panel.

31


# 33


 34

 Using supplied red butt connector, attach connecting wire to the remaining open leg of double

diode harness. Secure all loose wires with tie wraps and/or electrical tape.

Recommendation: Wait to close up sill and door panel until you varify that the Power Step is wired and operating correctly.

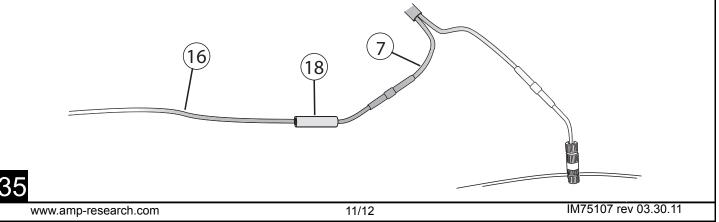

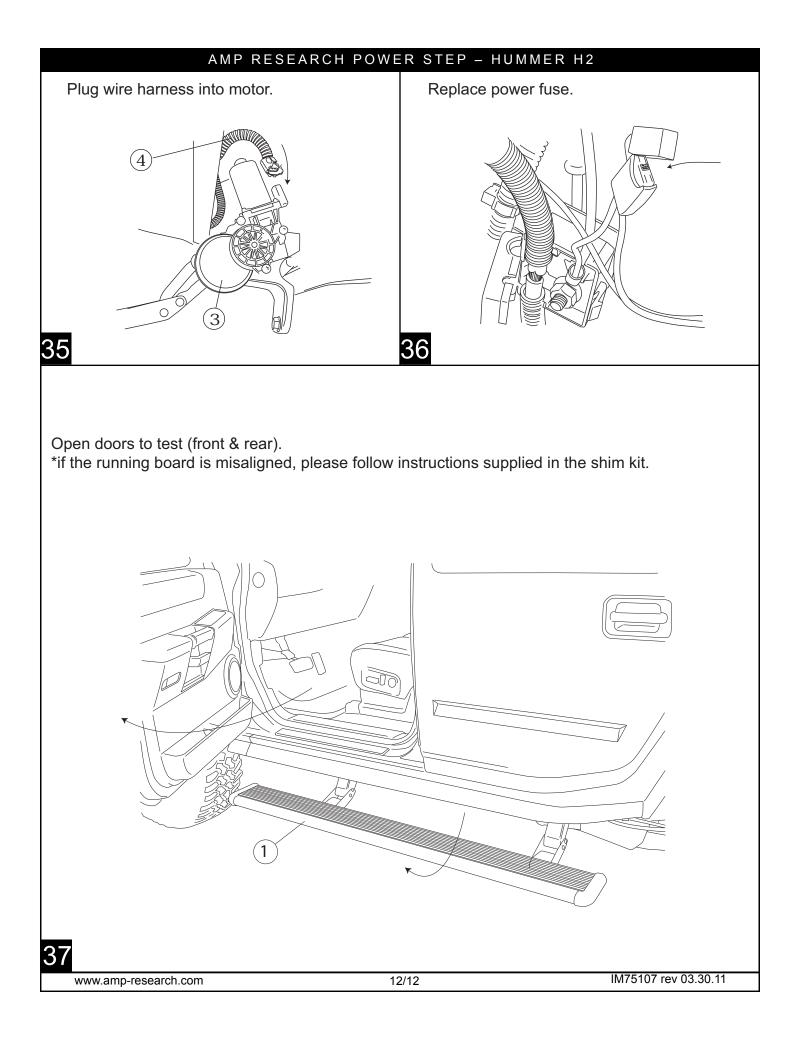

## атар Research Power Step

Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...



**POWERSTEP™ OPERATION** - The AMP Research PowerStep<sup>™</sup> automatically deploys when any door is opened. When both front and rear doors are closed, it retracts automatically under your vehicle.

**The drive system is designed to automatically stop if resistance, blockage or icing occurs.** To reset, clear any obstruction, then simply open and close the door and normal operation will resume.



**MAINTENANCE TIPS** - The stepping surface and linkages should be periodically washed with mild soap and water using a soft brush or sponge to dislodge any mud, dirt or accumulated road grime. **In severe driving conditions, pressure washing the linkages is strongly recommended.** <u>Avoid spraying the motors directly with high-pressure water.</u> After washing, apply Silicone spray lubricant to the pivot pins of each linkage assembly. Remove any excess lubricant with a soft clean cloth. Do not apply Silicone spray, waxes or protectants like Armor All<sup>®</sup> to the stepping surfaces.



**KEEPING POWERSTEP™ DEPLOYED** - When washing your vehicle, the PowerStep can be set to remain in the deployed position with the doors closed. **DO THIS...** 

- 1. With the PowerStep deployed, firmly press and hold the step down with your foot.
- 2. Close the door while continuing to press down on the step. (This will not harm the motor.)
- 3. To resume normal operation, simply open and close the door. (Repeat for both sides of the vehicle.)

#### CAUTION! KEEP HANDS AWAY WHEN THE POWERSTEP IS IN MOTION

#### AMP RESEARCH LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-800-315-9697

#### WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.